

BOSS®



Clima 3T

Mobile Aluminium Tower
1450/850 Clima

3T - Through the Trapdoor Method

Instruction Manual

EN 1004-2 en

Contents

1 Safety First

1.1	Introduction	2
1.2	Tower Designation	3
1.3	Maintenance - Storage - Transport	3

2 Building the Tower

2.1	Pre-Assembly Checks	4
2.2	Component Diagram	6
2.3	Quantity Schedule	8
2.4	Stabilisers	11
2.5	Assembly	12
2.5.1	Assembly General: Steps 1 to 3	14
2.5.2	Assembly for 1450 Towers: Steps 4 to 8	15
2.5.3	Assembly for 850 Towers: Steps 4 to 9	18
2.6	Dismantling	21

3 Using the Tower

3.1	Safety Checklist	22
3.2	Pre-Use Checklist	22
3.3	Use	22
3.4	Movement of the Assembled Prefabricated Tower Scaffold	24

1 Safety First

1.1 Introduction

Please read this instruction manual carefully.

This instruction manual shall be available at the location of use of this mobile access tower. Instruction manuals are also available to download at www.bossaccesstowers.com.



This product shall only be used in accordance with this manual without any modification.



FAILURE TO FOLLOW THESE INSTRUCTIONS MAY LEAD TO DEATH OR SERIOUS INJURY.

Mobile access towers must always be used in accordance with the national regulations. If any aspect of these instructions conflicts with local regulations, please contact Werner UK Sales & Distribution Ltd. for advice.

Please note that diagrams are for illustrative purposes only.

User training courses are available but must not be used as a substitute for familiarity with this manual.

BoSS mobile aluminium towers are light-weight scaffold towers used throughout the building and construction industry for both indoor and outdoor access solutions where a stable and secure platform is required. Ideal for maintenance and installation work or short-term access, the highly versatile towers provide a strong working platform for a variety of heights.

Verification and assessment documentation is held by Werner UK Sales & Distribution Ltd.

Compliances



The BoSS Clima 3T mobile tower system has been designed, tested, approved and certified to EN 1004-1:2020.

This instruction manual is in compliance with EN 1004-2-en.

1 Safety First

1.2 Tower Designation

EN 1004 3 8/12 XXXD H2

Design Code

Load Class (2 = 153kg/m² UDL, 3 = 204kg/m² UDL*)

Max. Platform Height Outdoors (m)

Max. Platform Height Indoors (m)

Access Method

A = Stairway, B = Stair Ladder, C = Inclined Ladder, D = Vertical Ladder

Clear Height Class (H1 = 1.85m, H2 = 1.90m)

*UDL = Uniformly distributed load

1.3 Maintenance - Storage - Transport

- The BoSS mobile tower system is robust and requires little maintenance.
- All components and their parts should be regularly inspected to identify damage, particularly to joints.
- Refer to the BoSS Inspection Guidance for detailed inspection and maintenance advice, the guidance is available to download at: www.bossacesstowers.com.
- Threads, hinges, and brace latches may be lubricated with light oil. Ensure oil does not contaminate climbing or walking surfaces.
- Safety labels should be kept legible. Replacement labels are available from Werner UK Sales & Distribution Ltd.
- Surfaces should be kept reasonably free of dried paint, plaster etc.
- Use of solvents on wooden platform surfaces and plastic components should be avoided.
- Components should be stored in clean, dry conditions with due care to prevent damage.
- During transportation ensure components are not damaged by excessive strapping forces.

2 Building the Tower


2.1 Pre-Assembly Checks

- Check overhead that the area into which the structure is to be erected contains no obstructions, particularly electrical or radio radiation hazards. The structure is conductive.
- Ensure the ground on which the mobile access tower is to be erected is capable of supporting the tower in use.
- Check the surface is level within the 210mm range of the adjustable legs.
- Only components specified in this manual shall be used with BoSS towers. Check all required components are onsite and in a suitable working condition.

- Damaged components shall not be used and must be put beyond use and disposed of according to local regulations.



- Adjustable legs should only be used for levelling purposes and never to gain extra height.
- Ensure distance from the ground to first climbing rung is less than 400mm.
- Only climb the tower from the inside using the access method provided.

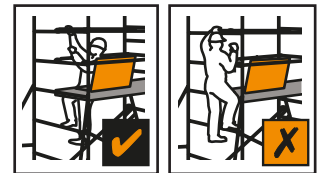

- This tower provides a work platform. It must not be used to access other structures.



- Tower scaffolds are not designed to be lifted or suspended.
- Ensure the safe working load on the structure is not exceeded.


2 Building the Tower

- Tools and materials should be lifted using a reliable lifting material (e.g. a strong rope) employing a secure and reliable knot to ensure safe fastening and always lift within the footprint of the prefabricated tower scaffold (i.e. within the area bounded by the stabilisers). When raising or lowering components be aware of the potential for falling objects.
- Alternatively, components may be passed up by hand. See guidance on page 12.
- Check this manual is available and its contents familiar to all those involved.
- If assembling outdoors; check the forecast windspeed.

- If the wind speed reaches 17 mph (7.6 m/s) you should cease work and dismantle the tower.

mph	km/h	m/s	Action
17	27	7.6	Stop work & dismantle the tower


- Also consider the wind funnelling effect of nearby buildings.

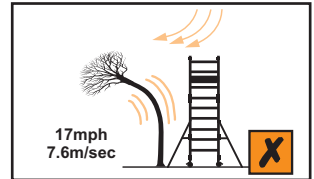

- Towers greater than 8.2m platform height are for indoor use only.
- This structure is designed to be self-supporting under the loading condition requirements of EN 1004-1:2020 and does not require tying in. Consideration should be given to potential wind conditions if the tower is left unattended.

2 Building the Tower

2.2 Component Diagram

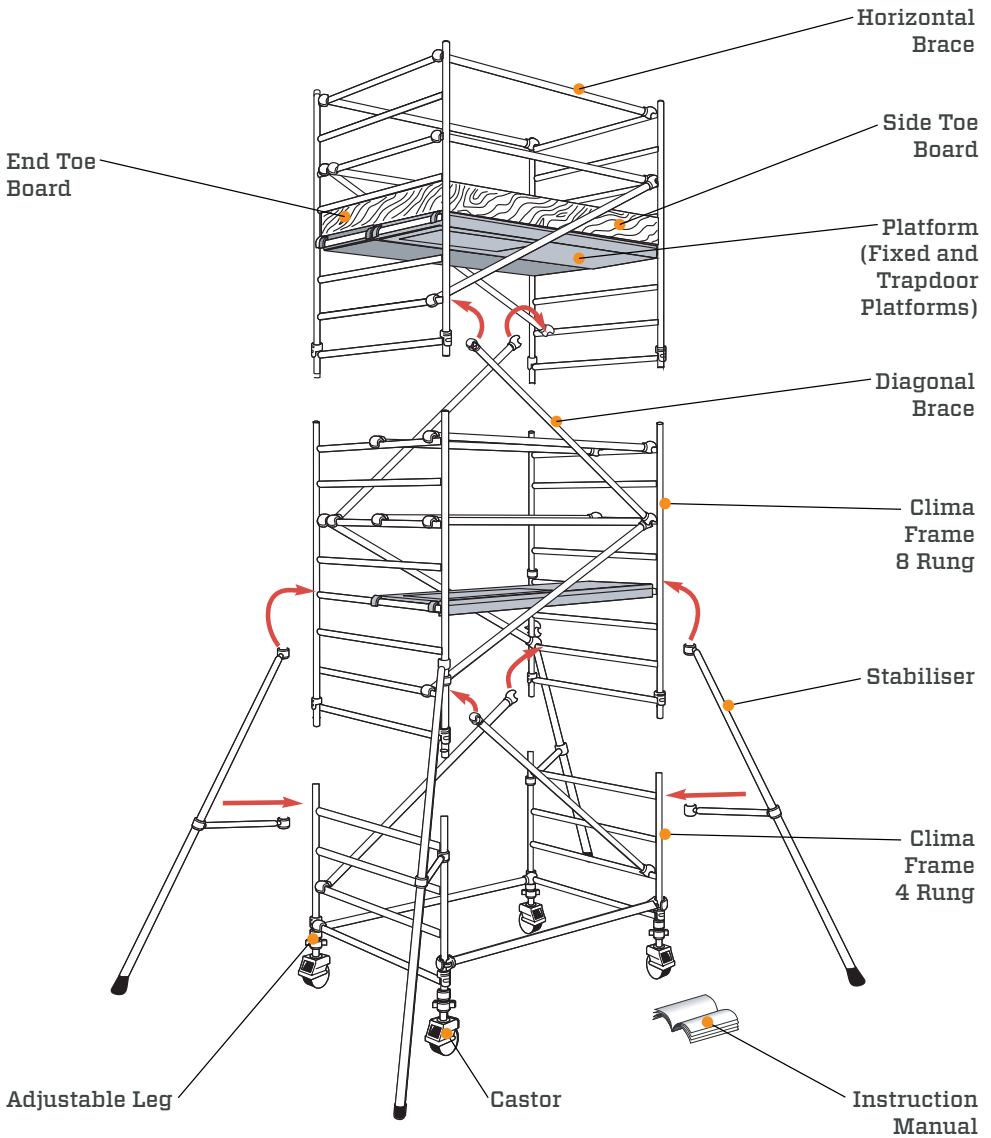

2 Building the Tower

Component Weights

Component		
Code	Name	Weight (kgs)
32842300	Castor 150mm	3.3
33551300	Adjustable Leg	1.1
39251300	Clima Frame 850 4 Rung	4.3
39451300	Clima Frame 850 6 Rung	6.0
39351300	Clima Frame 850 8 Rung	7.7
39151300	Clima Frame 1450 4 Rung	5.9
39751300	Clima Frame 1450 6 Rung	8.3
39651300	Clima Frame 1450 8 Rung	10.8
30151100	Fixed Platform 1.8m	11.8
30251100	Fixed Platform 2.5m	16.0
30451100	Trapdoor Platform 1.8m	12.7
30551100	Trapdoor Platform 2.5m	16.3
31251300	Horizontal Brace 1.8m (Red)	2.0
34851300	Horizontal Brace 2.5m (Red)	2.4
31351300	Diagonal Brace 2.1m (Blue)	2.1
31451300	Diagonal Brace 2.7m (Blue)	2.5
30450900	Side Toe Board 1.8m	3.2
30550900	Side Toe Board 2.5m	4.4
30250900	End Toe Board 0.85m	1.0
30350900	End Toe Board 1.45m	2.1
30150900	Toe Board Holder	0.3
31751300	SP7 Fixed Stabiliser	3.8
31851300	SP10 Telescopic Stabiliser	8.8
31951300	SP15 Telescopic Stabiliser	12.8

2.3 Quantity Schedule

BoSS 1450 Clima to EN 1004: Available in 2 lengths - 1.8m and 2.5m

Component Code	Component	Working Height (m)	Internal or External Use														Internal Use													
			3.2	3.7	4.2	4.7	5.2	5.7	6.2	6.7	7.2	7.7	8.2	8.7	9.2	9.7	10.2	10.7	11.2	11.7	12.2	12.7	13.2	13.7	14.2					
32842300	Castor 150mm	1.2	1.7	2.2	2.7	3.2	3.7	4.2	4.7	5.2	5.7	6.2	6.7	7.2	7.7	8.2	8.7	9.2	9.7	10.2	10.7	11.2	11.7	12.2	12.7	13.2	13.7	14.2		
33551300	Adjustable Leg	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	
39151300	Clima Frame 1450 4 Rung	-	2	2	-	-	2	2	-	-	2	2	-	-	2	2	-	-	2	2	-	-	2	2	-	-	2	2	-	
39751300	Clima Frame 1450 6 Rung	-	2	-	2	-	2	-	2	-	2	-	2	-	2	-	2	-	2	-	2	-	2	-	2	-	2	-	-	
39651300	Clima Frame 1450 8 Rung	2	-	2	2	4	2	4	6	4	6	4	6	8	6	8	6	8	10	8	10	8	10	8	10	10	12	10	12	
30151100/	Fixed Platform 1.8m /	1	1	1	2	1	1	1	2	1	1	1	2	1	1	1	2	1	1	1	1	2	1	1	1	2	1	1	1	
30251100	2.5m																													
30451100/	Trapdoor Platform 1.8m	1	1	1	1	2	2	2	2	3	3	3	3	4	4	4	4	4	5	5	5	5	5	5	5	5	6	6	6	
30551100	/2.5m																													
31251300/	Horizontal Brace 1.8m /	6	6	6	10	10	10	14	14	14	14	14	14	14	14	14	18	18	18	18	18	22	22	22	22	22	26	26	26	
34851300	2.5m (Red)																													
31351300/	Diagonal Brace 2.1m /	2	4	4	6	6	8	8	10	10	12	12	14	14	14	16	16	18	18	20	20	22	22	22	22	22	24	24	24	
31451300	2.7m (Blue)																													
30450900/	Side Toe Board 1.8m /	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	
30550900	2.5m																													
30350900	End Toe Board 1.45m	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	
30150900	Toe Board Holder	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	
31751300	SP7 Fixed Stabiliser	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	
31851300	SP10 Telescopic Stabiliser	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
31951300	SP15 Telescopic Stabiliser	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
Tower Total	Self-weight 1.8m (kgs)	107	119	124	154	160	171	177	206	232	244	249	278	284	313	318	330	336	348	353	383	388	389	401	406	406	406	406	406	406
Tower Total	Self-weight 2.5m (kgs)	120	132	137	173	178	190	195	230	256	268	273	308	313	325	348	383	371	383	388	424	429	441	441	446	446	446	446	446	446
Max. Exerted	Leg Load 1.8m (kgs)	66	74	82	90	98	106	114	122	133	145	157	168	180	187	195	196	208	220	232	244	256	268	280	280	280	280	280	280	280
Max. Exerted	Leg Load 2.5m (kgs)	104	113	122	131	140	149	158	167	179	192	205	217	230	232	235	235	251	266	281	297	313	329	344	344	344	344	344	344	344

BoSS 850 Clima to EN 1004: Available in 2 lengths - 1.8m and 2.5m

Component Code	Component	Working Height (m)	Platform Height (m)	Internal or External Use																Internal Use						
				3.2	3.7	4.2	4.7	5.2	5.7	6.2	6.7	7.2	7.7	8.2	8.7	9.2	9.7	10.2	10.7	11.2	11.7	12.2	12.7	13.2	13.7	14.2
32842300	Castor 150mm			4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
33551300	Adjustable Leg			4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
39251300	Clima Frame 850 4 Rung			-	2	2	-	2	2	-	2	-	2	-	2	-	2	-	2	-	2	-	2	-	2	
39451300	Clima Frame 850 6 Rung			-	2	-	2	-	2	-	2	-	2	-	2	-	2	-	2	-	2	-	2	-	2	
39851300	Clima Frame 850 8 Rung			2	-	2	2	4	2	4	2	4	6	4	6	6	8	6	8	8	10	8	10	10	12	
30151100/30251100	Fixed Platform 1.8m / 2.5m			-	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
30451100/30551100	Trapdoor Platform 1.8m / 2.5m			1	1	1	1	2	2	2	2	3	3	3	3	4	4	4	4	4	5	5	5	6	6	
31251300/34851300	Horizontal Brace 1.8m / 2.5m (Red)			6	6	6	10	10	10	10	14	14	14	14	14	18	18	18	18	22	22	22	22	26	26	
31351300/31451300	Diagonal Brace 2.1m / 2.7m (Blue)			2	4	4	6	6	8	8	10	10	12	12	14	14	16	16	18	18	20	20	22	24	24	
30450900/30550900	Side Toe Board 1.8m / 2.5m			2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	
30250900	End Toe Board 0.85m			2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	
30150900	Toe Board Holder			4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	
31751300	SP7 Fixed Stabiliser			4	4	4	4	4	4	4	4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
31851300	SP10 Telescopic Stabiliser			-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
31951300	SP15 Telescopic Stabiliser			-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
Tower Total Self-weight 1.8m (kgs)				87	97	101	129	133	144	147	175	199	210	213	241	246	273	276	304	309	319	322	351	355	365	
Tower Total Self-weight 2.5m (kgs)				102	114	119	155	160	172	177	212	238	250	255	290	295	325	330	348	353	365	370	406	411	423	
Max. Exerted Leg Load 1.8m (kgs)				75	80	85	90	95	100	105	110	116	122	128	134	140	147	156	158	163	169	174	179	184	190	
Max. Exerted Leg Load 2.5m (kgs)				115	118	120	122	124	126	128	130	133	137	140	144	147	149	181	181	191	201	211	221	231	241	

2 Building the Tower

Assembly Variations

This section lists the permitted component variation from the Quantity Schedule.

Note: These substitutions must be made before assembly.

Stabilisers

Stabilisers with Universal Clamps may be substituted:


Component Code	Description	Weight (kg)
31751400	SP7	4.0
31851400	SP10	9.0
31951400	SP15	13.1

Castors

Other Castor sizes and types may be substituted:

Component Code	Description	Weight (kg)
31842300	Diameter 150mm (Tyred)	3.2
32942300	Diameter 200mm	3.9
31942300	Diameter 200mm (Tyred)	3.9

High Clearance Frame

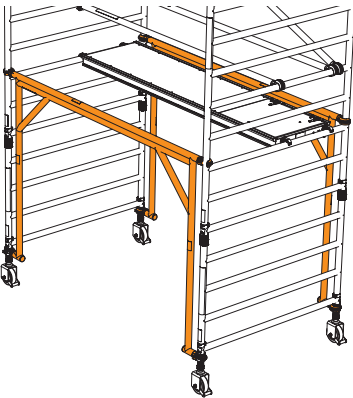


If side walk-through access is required at the base of 4.2m, 6.2m, 8.2m, 10.2m or 12.2m platform height towers, high clearance frames may be used in place of the four lower diagonal braces and two lower horizontal braces.

High clearance frames must not be used in conjunction with walk-through frames.

Component Code	Description	Weight (kg)
30051500	High Clearance Frame 1.8m	10.0
30151500	High Clearance Frame 2.5m	12.0

2 Building the Tower

Walk-through Frame

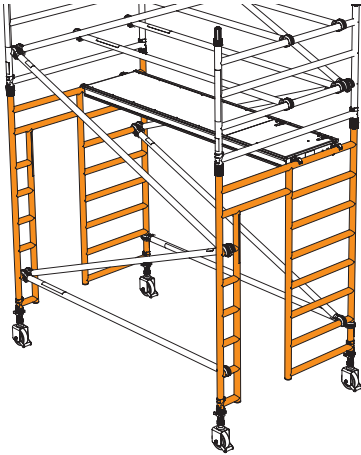


If end walk-through access is required at the base of 2.2m, 4.2m, 6.2m, 8.2m, 10.2m or 12.2m platform height, 1450 wide towers, walk-through frames may be used.

In this case the 1m clima frames must be fitted above the walk-through frames.

Walk-through frames must not be used in addition to high clearance frames.

Component Code	Description	Weight (kg)
33151700	Walk-through Frame 2.0m	10.8

2.4 Stabilisers

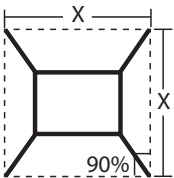

	Double Width 1450 Tower		Single Width 850 Tower	
	1.8m	2.5m	1.8m	2.5m
	X & Y (mm)	X & Y (mm)	X & Y (mm)	X & Y (mm)
SP7	3286	3629	2994	3201
SP10	4789	5100	4458	4734
SP15	5520	5838	5195	5510

SP10 and SP15 stabilisers must always be fully extended.

Position the lower clamp so that the arm is as close to horizontal as possible. Adjust the position of the top clamp to ensure the stabiliser foot is in firm contact with the ground. Ensure the clamps are secure.

2 Building the Tower


2.5 Assembly

This tower structure must be assembled, and components oriented, in accordance with this instruction manual. Deviation from this instruction manual is not permitted.



THIS TOWER MUST NOT BE USED AS AN ANCHOR POINT FOR PERSONAL FALL PROTECTION EQUIPMENT.

- No tools are required for assembly.
- The assembly uses the 3T (Through the Trapdoor) method that provides collective fall protection.
 - From the sitting position in the trapdoor opening fit all guardrails before standing on the platform.
 - Fit braces in the locations described and ensure the claws are locked.

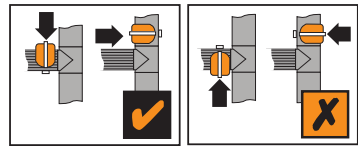

- DO NOT stand on an unprotected platform



- The tower may be assembled/disassembled by a single person, but it is recommended that additional persons help. Only 2 persons are permitted on the tower during assembly/dismantling, and they must not be on the same platform. Additional persons can help from ground level.
- Components must be lifted within the footprint of the tower using a reliable method such as a strong rope with a clove hitch knot.
- Castor brakes should be locked as soon as the tower base is in position.
- The tower base should be levelled to within 0.6° before continuing the assembly.
- The adjustable legs are for levelling the tower only and not to be used to gain extra height.
- Ensure when the base is levelled the distance from the ground to the first climbing rung is less than 400mm.
- Stabilisers of the size specified in the quantity schedule should be fitted at the earliest opportunity.

2 Building the Tower


- Always start assembly with the smallest end frames at the base.

Platform Height (m)	Frame at Base
1.7, 2.2, 3.7, 4.2, 5.7, 6.2, 7.7, 9.7, 10.2, 11.7, 12.2	4 Rung
2.7, 4.7, 6.7, 8.7, 10.7	6 Rung
1.2, 3.2, 5.2, 7.2, 9.2, 11.2	8 Rung

- Where all three frames are specified, start with the 4 rung, 6 rung next and 8 rung on top. Refer to the quantity schedule for details.


Platform heights:

1.2, 3.2m, 5.2m, 7.2m, 9.2m, 11.2m

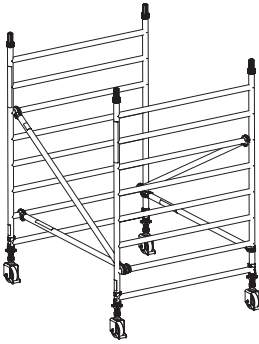


Platform heights:

2.2m, 4.2m, 6.2m, 8.2m, 10.2m, 12.2m

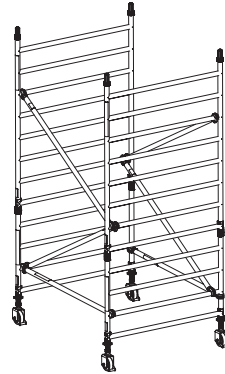


Platform heights:

1.7, 3.7m, 5.7m, 9.7m, 11.7m

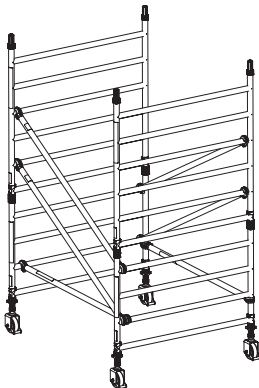

Platform heights:


2.7m, 4.7m, 6.7m, 8.7m, 10.7m

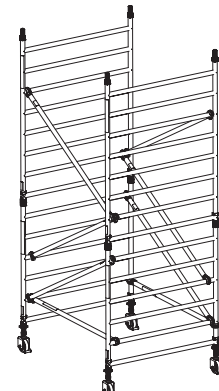

2 Building the Tower


2.5.1 Assembly General

1 Push four castors onto four adjustable legs. Insert adjustable legs into two end frames as shown. Lock castor brakes.

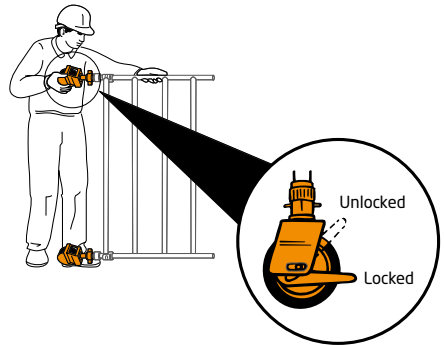


2 Fit one horizontal brace (red) onto the vertical of an end frame, just above the bottom rung, with the claw facing outwards.

All locking claws must be opened before fitting.

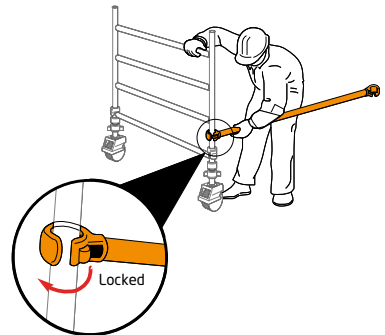

3 Position the second end frame as shown and at the other end of the horizontal brace onto the vertical, just above the bottom rung.

Fit a second horizontal brace between the bottom rungs on the other side of the frames to square the tower.

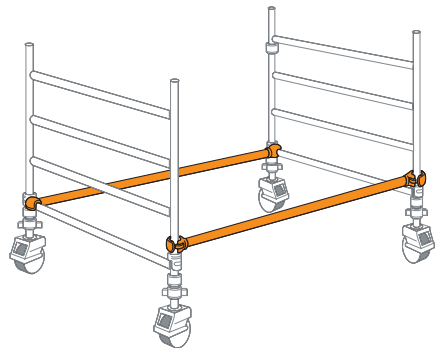

Assembly for 1450 towers, see page 15 for following steps.

Assembly for 850 towers, see page 18 for following steps.

2 Building the Tower

2.5.2 Assembly for 1450 Towers


The procedure illustrated shows a tower starting with a 4 rung frame.

4 Fit two additional end frames and check that the frame interlock clips are engaged.


Fit two diagonal braces (blue) in opposite directions between the 2nd and the 6th rungs.

Ensure the frames are vertical and level by checking with a spirit level and setting the adjustable legs as required.

Only use the adjustable legs to level the tower and not to gain extra height.

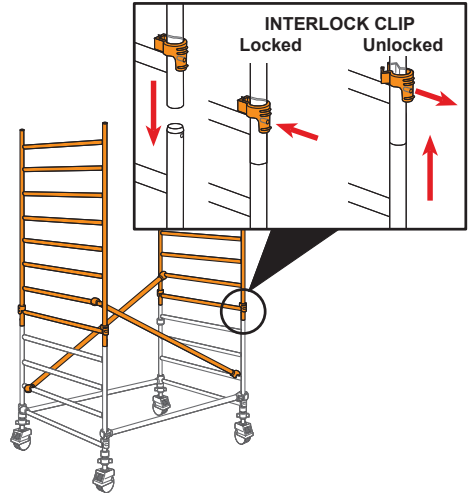

5 Fit stabilisers (see notes on page 11).

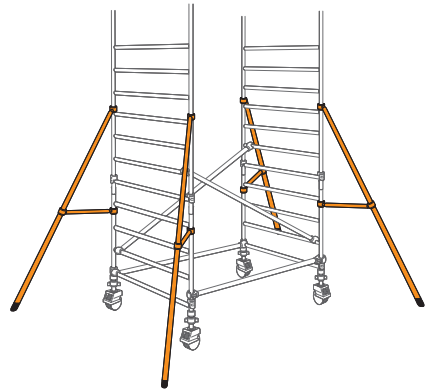


2 Building the Tower

6 Fit the next pair of diagonal braces in opposite direction between the 6th and 10th rungs. Fit a trapdoor platform on the 8th rung (2.0m) on one side of the tower. Ensure that the trapdoor is positioned with the hinges towards the outside of the tower as shown.

Climb the end frame below the trapdoor on the inside of the tower, and from within the protected trapdoor position, fit horizontal braces on the 10th and 12th rungs (in that order) on both sides of the platform.

When horizontal braces are fitted as guardrails, they should be 0.5m and 1.0m (2 and 4 rungs) above the platform level.


Do not climb onto the platform until all guardrails are in place.

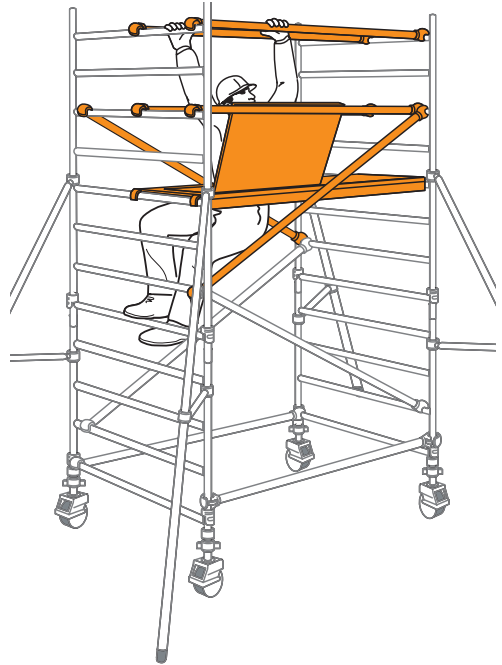


2 Building the Tower

7 Continue the procedure until the required height is reached, adding additional pairs of end frames, diagonal braces and fitting trapdoor platforms, as shown on previous steps. At every platform level, add horizontal braces as guardrails from the protected position within the trapdoor (as shown in **Step 6**).

At the required platform height, fit the fixed platform and a trapdoor platform alongside it. Fit the final guardrails (as shown in **Step 6**).

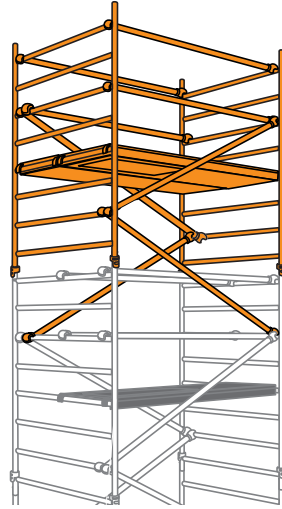

8 Fit toe boards.
The tower is now complete.

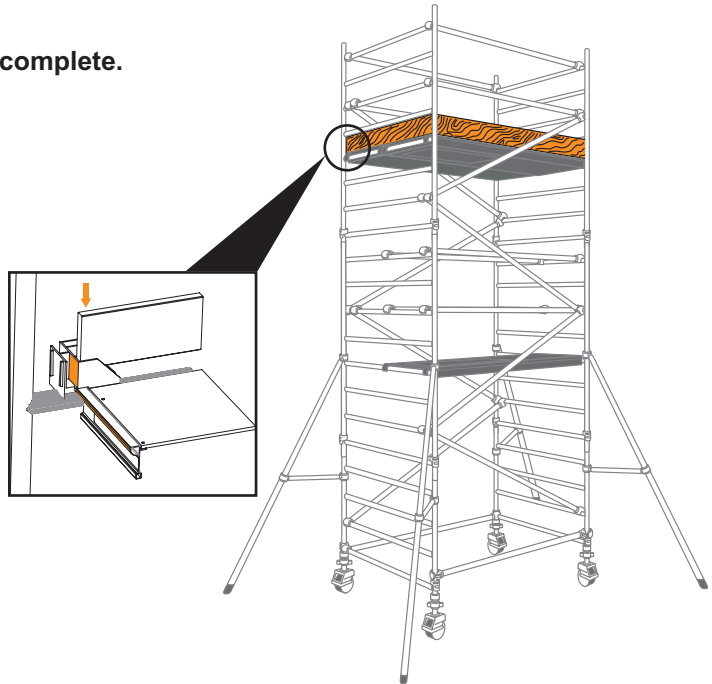

2 Building the Tower

2.5.3 Assembly for 850 Towers

The procedure illustrated shows a tower starting with an 8 rung frame.

- 4** Fit a trapdoor platform on the 4th rung. Fix the horizontal braces as guardrails on the 6th and 8th rungs (2 and 4 rungs above the platform) on both sides of the tower.





2 Building the Tower

5 Fit two diagonal braces (blue) in opposite directions between the 2nd and 6th rungs.

Ensure the frames are vertical and level by checking with a spirit level and setting the adjustable legs as necessary.


Fit the next pair of end frames and check the frame interlock clips are engaged.

Fit stabilisers (see notes on **page 11**).

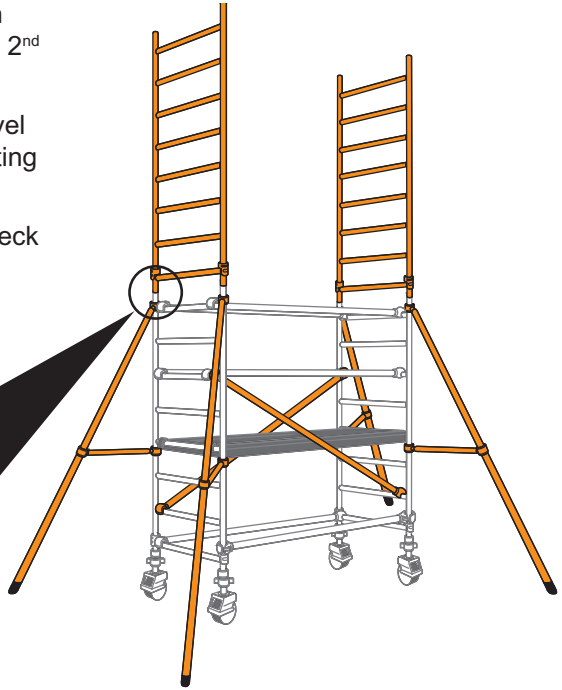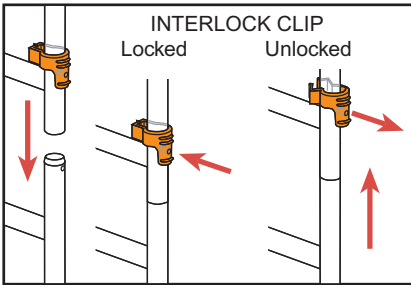

6 Fit two pairs of diagonal braces in opposite directions between the 6th and 10th rungs and the 10th and 14th rungs.


Locate a trapdoor platform on the 12th rung.

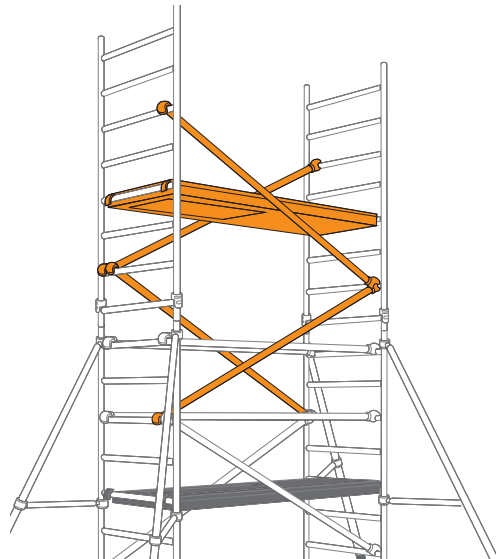

2 Building the Tower


7 Climb up the inside of the tower and from the protected position of the trapdoor, fit horizontal braces as guardrails (on both sides) to the 14th and 16th rungs (2 and 4 rungs above the platform in that order).

Do not climb onto the platform until all guardrails are in place.

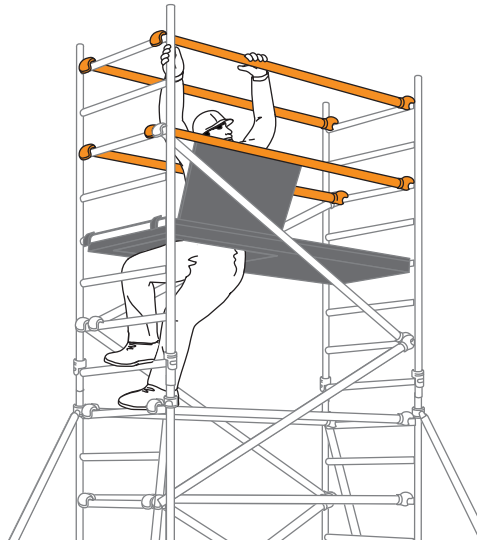

8 Continue the procedure until the required height is reached, adding additional pairs of end frames, diagonal braces and fitting trapdoor platforms, as shown on previous steps. At every platform level, add horizontal braces as guardrails at 2 and 4 rungs above the platform (in that order) on both sides of the platform (as shown in **Step 7**).


Fit these guardrail braces from the protected trapdoor position.

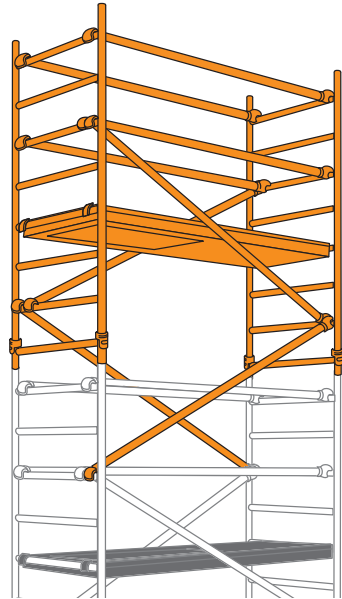

2 Building the Tower

9 Fit the toe boards.

The tower is now complete.

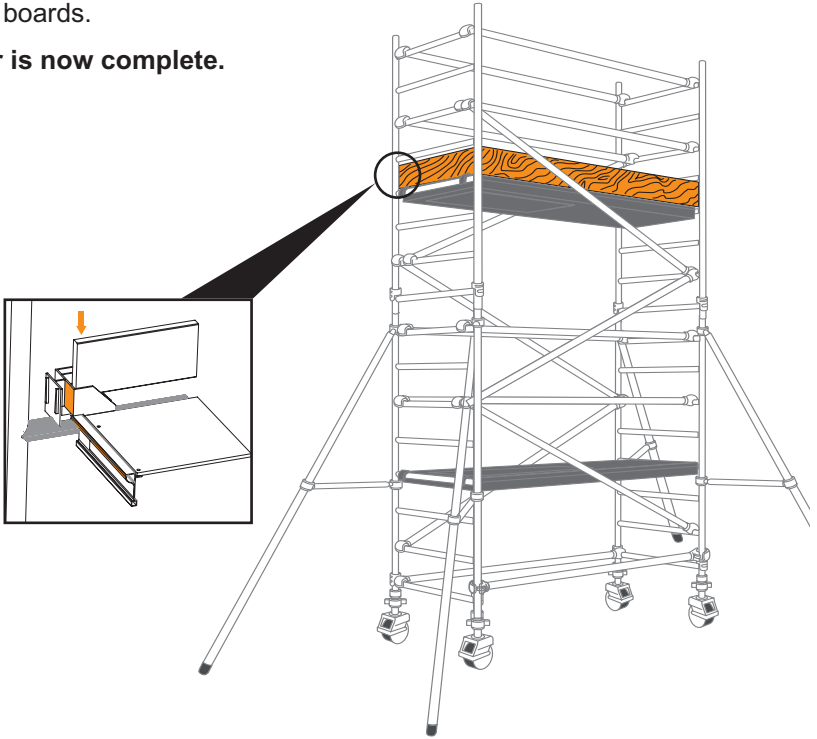

2.6 Dismantling

To dismantle the tower, reverse the assembly procedure.

When removing the guardrails unlock the four claws furthest from the trapdoor and return immediately to the protected position within the trapdoor. The other claws can then be unlocked, and the guardrails removed from the tower.

Tools and materials should be lowered using a secure and reliable lifting material (e.g. a strong rope) employing a secure and reliable knot to ensure safe fastening and always lower within the footprint of the prefabricated tower scaffold (i.e. within the area bounded by the stabilisers). When raising or lowering components be aware of the potential for falling objects.

Alternatively, components may be passed down by hand. See guidance on page 12.

3 Using the Tower

3.1 Safety Checklist

This inspection must be carried out before initial use, after moving the tower, if any environmental condition change that may affect the tower and at regular intervals determined by local regulations.


Local regulations may also specify other information to be supplied to the user or attached to the structure. These regulations must be followed.

3.2 Pre-Use Checklist

Tower upright and level to within 0.6°	✓
Castor brakes locked and all wheels in ground contact	✓
All interlock clips engaged	✓
Braces/Guardrails correctly positioned	✓
All claws latched	✓
All platform wind-locks engaged	✓
Correct stabiliser size fitted and positioned	✓
Toe boards fitted to working platform	✓
Instruction manual available to user	✓
No environment changes affecting safe use have occurred or are likely	✓
Tower is the correct height for intended use	✓


3.3 Use

- This tower must not be used as an anchor point for personal fall arrest equipment.
- The tower must only be climbed on the inside, using the access method specified.

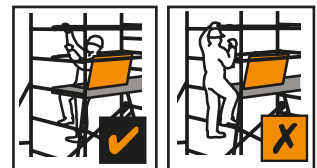

3 Using the Tower

- This tower provides a work platform. It must not be used to access other structures.

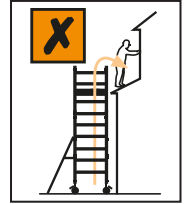


- Raising and lowering tools and materials must only be conducted within the tower footprint.
- Only one platform at a time can be used as a working platform. Toe boards must be fitted to that platform. Other platforms are for access only.
- Ensure the safe working load on the structure is not exceeded.

The safe working loads for the working platform are shown below.

850 TOWERS CLASS 3:

1.8m x 0.85m: S.W.L = 208kg U.D.L


2.5m x 0.85m: S.W.L = 293kg U.D.L

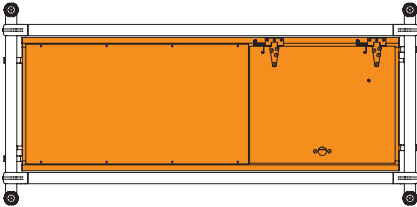

1450 TOWERS CLASS 3:

1.8m x 1.45m: S.W.L = 416kg U.D.L

2.5m x 1.45m: S.W.L = 586kg U.D.L

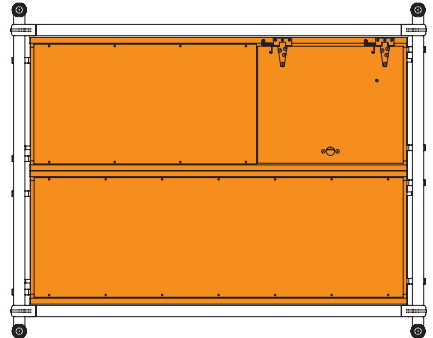

- The adjustable legs are for levelling the tower only. They must not be used to gain extra height.
- Do not use boxes, stepladders or other objects to gain extra height.




- Beware of horizontal forces that might cause instability. Maximum horizontal force = 30kg.



3 Using the Tower

- Beware of high winds.
 - If assembling outdoors; check the forecast windspeed.
 - If the wind speed reaches 17 mph (7.6 m/s) you should cease work and dismantle the tower.

mph	km/h	m/s	Action
17	27	7.6	Stop work & dismantle the tower

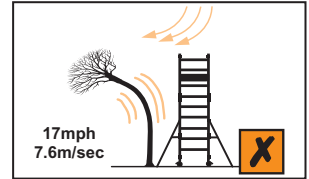

- Also consider the wind funnelling effect of nearby buildings and other open areas, which could be present when the tower is used internally.



- Sheets, tarpaulins, or signage must not be attached to this tower outdoors.
- Towers above 8.2m platform height are for indoor use only.

3.4 Movement of the Assembled Prefabricated Tower Scaffold



MOVING A FULLY ASSEMBLED TOWER CAN BE EXTREMELY HAZARDOUS.

If there is any doubt about the safety of the move, the tower must be dismantled and reassembled in the new location.


This tower is not designed to be lifted or suspended.

Ensure gloves or other suitable hand protection is worn.


3 Using the Tower

Before


- Beware of rough, sloping ground and high winds. Tower stability is improved by reducing height. Reduce the height of the tower prior to moving in accordance with any applicable and relevant risk assessment, safe system of work or method statement.

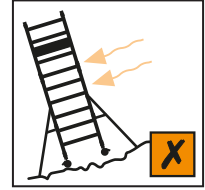

- Survey the route to be taken. Assess the ground condition/slope and any overhead obstructions or hazards and wind conditions.

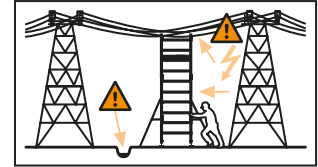

- Ensure there are no persons, tools, or materials on the tower.

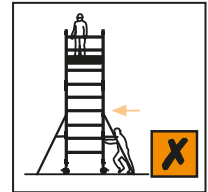

- Release the castor brakes.
- Release the stabiliser top clamp to allow the feet to be raised a maximum of 25mm. Re-tighten the clamps.

During

- The tower must be moved only by manual effort, pushing at the base of the tower.
- The tower should never be moved faster than normal walking speed.
- Constant attention must be given to the position of the castors, stabiliser feet and the top of the tower.
- If there is any resistance to movement, stop and investigate the reason before continuing.

After

- As soon as the move is complete; lock the castor brakes, lower the stabiliser feet, and perform the pre-use inspection.



For further information and support for the Clima or any other products, design advice and services, please contact:

Werner UK Sales & Distribution Ltd.
Blackwater Trading Estate,
The Causeway, Maldon,
Essex, CM9 4LJ,
United Kingdom

Hungary Kft.
6000 Kecskemét,
Szt. Istvan Krt. 19.

+44 (0)1621 745900

uk.customercare@prodrivenbrands.com

bossacesstowers.com

Werner UK Sales & Distribution Ltd.
is a manufacturer member of:

